
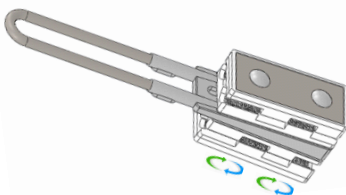
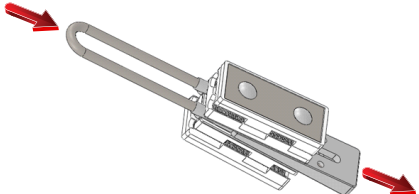
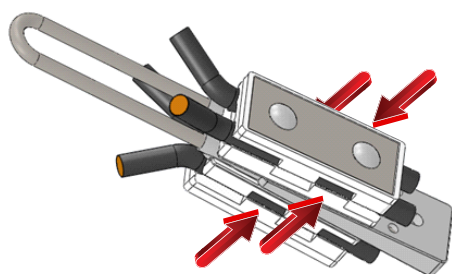


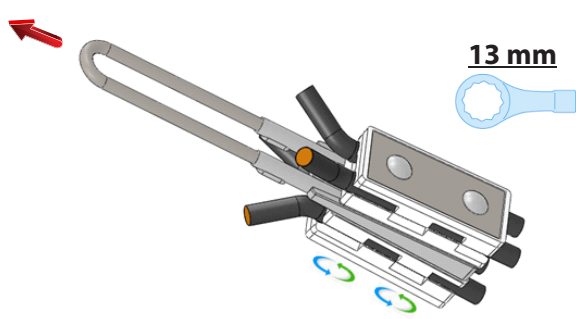

**CODE:** P801902  
**Item:** Tension clamp 17.07.16 - 4x(50-120)

## INSTALLATION MANUAL

1.	Unscrew the nuts of the tensioning clamp.	
2.	Release the tensioning segment of the clamp to have enough space to place the cables (four cores).	
3.	Place the cables (four cores) in the tension clamp's cable grooves.	
4.	With placed cables in appropriate cable grooves of tension clamp, pull the tensioning segment of the clamp and use wrench to tighten the nuts of the clamp till value of the torque as written on the clamp. This will establish proper fixation of the cables into the clamp.	
5.	Place the installed tension clamp on hook, bracket or other similar hanging segment on the wall, pole, etc.	
6.	The clamp is now ready for exploitation.	


**LEGAL NOTICE:**

The product must be installed only by a competent trained person with installation practices and with sufficient knowledge of good safety and installation practices in respect of electrical equipment. PLAMEN accepts no liability concerning claims resulting from misuse, incorrect installation or ignored national safety regulations or other national provisions. Failure to follow the installation instructions may result in damage to the product and serious or fatal injury.