
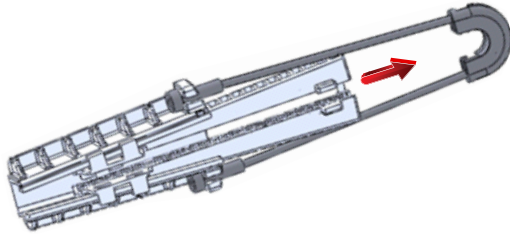
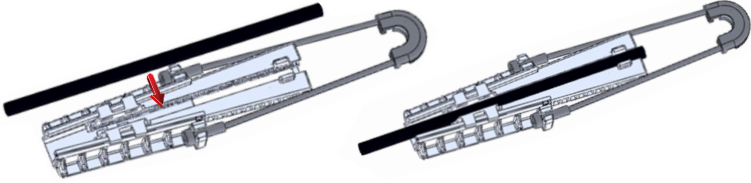
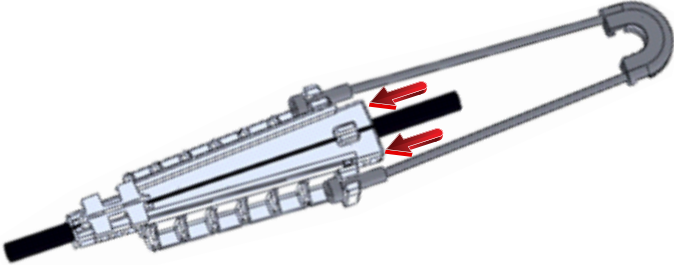



**CODE:** P801600, P801601, P801602  
**Item:** Tension clamps PA1000, PA1500, PA2000

### INSTALLATION MANUAL

1.	Pull out the wedges from the clamp to make space for messenger line insertation.	
2.	After previous step, place appropriate messenger line into the clamp's space of the wedges.	
3.	Press the both wedges into the clamp along with messenger line. Direction shown on the right picture. <i>Manufacturer advises to easily knock with small hammer both wedges to achieve better fixation.</i>	
4.	Place the installed tension clamp on hook, bracket or other similar hanging segment on the wall, pole, etc.	
5.	The clamp is now ready for exploitation.	

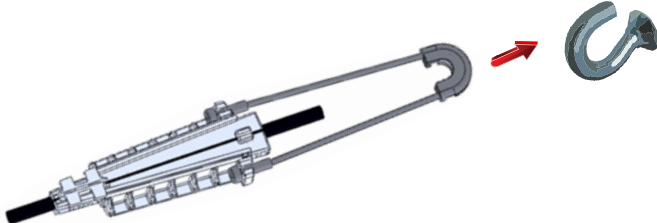

**LEGAL NOTICE:**

The product must be installed only by a competent trained person with installation practices and with sufficient knowledge of good safety and installation practices in respect of electrical equipment. PLAMEN accepts no liability concerning claims resulting from misuse, incorrect installation or ignored national safety regulations or other national provisions. Failure to follow the installation instructions may result in damage to the product and serious or fatal injury.