
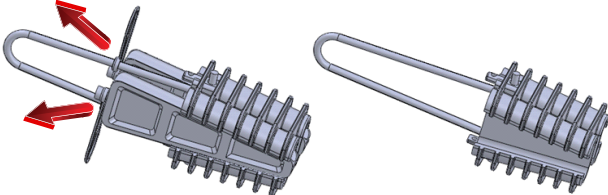
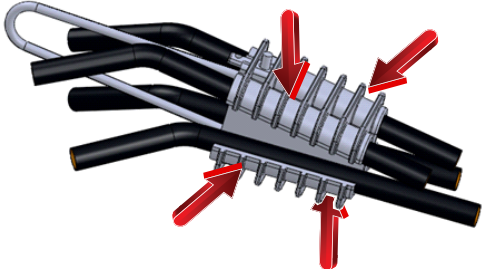
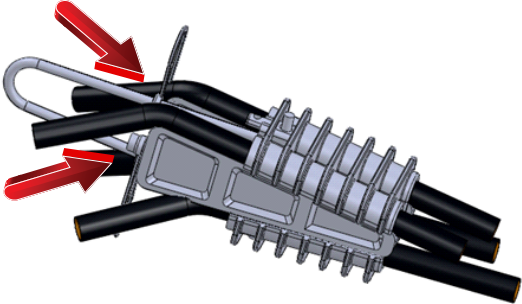



CODE: P801809
Item: Tension clamp PA200 - 4x(10-25)

INSTALLATION MANUAL

| | | |
|----|---|---|
| 1. | Pull out the wedges of the tensioning clamp to have enough space to place the cables. |  |
| 2. | Place the cables (four cores) in the tension clamp's cable grooves. |  |
| 3. | With placed cables in appropriate cable grooves of tension clamp, press-in the wedges of the clamp to fix-in the cables into the clamp. <i>*It is recommended to knock the wedges with hammer into the clamp several smooth times.</i> |  |
| 4. | Place the installed tension clamp on hook, bracket or other similar hanging segment on the wall, pole, etc. |  |
| 5. | The clamp is now ready for exploitation. |  |

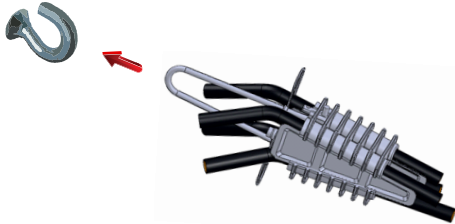

LEGAL NOTICE:

The product must be installed only by a competent trained person with installation practices and with sufficient knowledge of good safety and installation practices in respect of electrical equipment. PLAMEN accepts no liability concerning claims resulting from misuse, incorrect installation or ignored national safety regulations or other national provisions. Failure to follow the installation instructions may result in damage to the product and serious or fatal injury.